

INSTALLATION INSTRUCTIONS

Accessory

REAR ASHTRAY

Application

1999 ACCORD
2- AND 4-DOOR

Publications No.


All 20013

Issue Date

SEP 1998

PARTS LIST

Rear ashtray

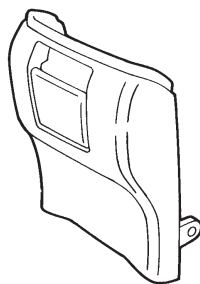

2 Self-tapping screws



2 Grommets




TOOLS REQUIRED

Phillips screwdriver


INSTALLATION

NOTE: Be extremely careful not to damage the center console.

1. Remove the two self-tapping screws securing the center console rear cover. Gently spread the sides of the center console to release the bottom of the rear cover; then release the clip, and remove the rear cover. Set the rear cover aside; it will not be reused.

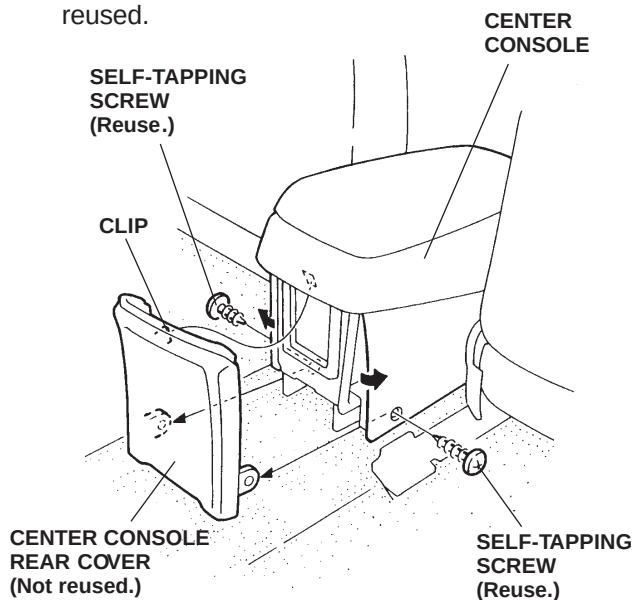

2. Push one grommet into each square hole in the bracket on the center console.

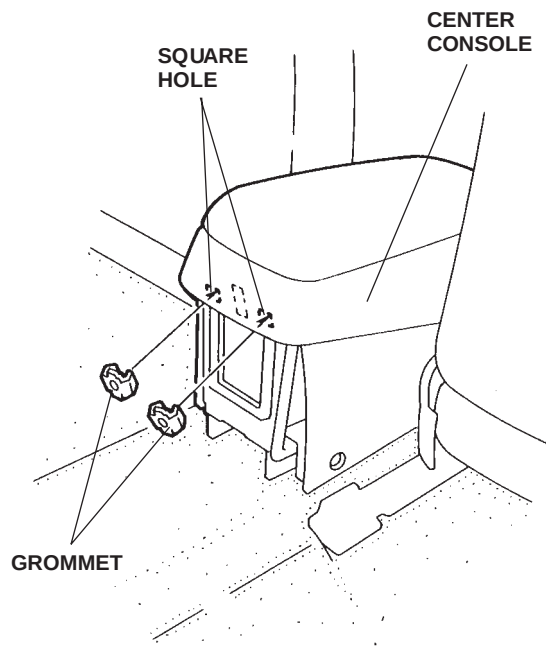

3. Position the rear ashtray on the center console, and insert the retaining tab into the hole in the bracket. Install the two self-tapping screws removed in step 1, and the two self-tapping screws from the kit. Tighten all four screws securely.

